



## Cassette to CD



### STEP 1

Press the **POWER** button



### STEP 2

Press the **PHONO/TAPE/AUX** button to cycle through modes

 
- We want to select TAPE



### STEP 3

Load your **CD-R**

- Press the Open/Close Button

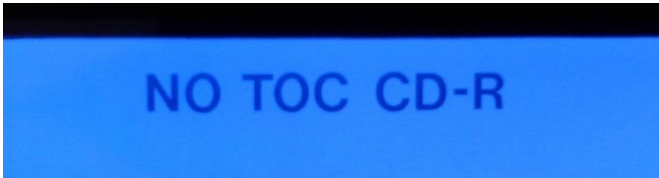

#### STEP 4

Make sure **NO TOC** and **CD-R** show up on the display.



#### STEP 5

Set the **TAPE** switch to fit your cassette tape.

- If you have a plastic cassette, chose NORMAL.
- If you have a metal or chrome tape, chose HIGH.



#### STEP 6

Load your cassette in the cassette holder.



#### STEP 7

Find the place on the cassette where you want to start recording.

- Press the **||** button on the cassette player.

Both the **▶** and **||** buttons should be pressed down.



### STEP 8

Press the **RECORD** Button

 
- This starts the record pause mode.
- The red indicator on the **RECORD** button should **blink**.
- On the display, the **REC** indicator should **blink** and the **||** indicator should **light up**.



### STEP 9

Press the **Play/Pause** ( ▶ / || ) button on the main control panel to start recording

- This starts the recording process.
- **Unpause** the cassette by pressing the **||** button

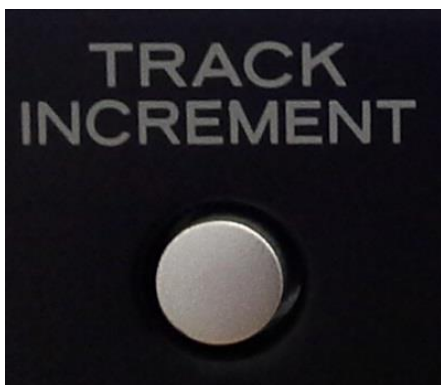

### STEP 10

If you would like to have **separate tracks** on the CD, press **TRACK INCREMENT** at the end of each song.



### STEP 11

Recording will **automatically stop** at the end of each side.

- You can also stop recording by pressing the **stop** ( ■ ) button.



### STEP 12

When you are done recording on your CD, you need to finalize it so it can be played on other devices.

- Switch from TAPE to **CD**.
- Press **Finalize** once.
- Then Press **Enter**.

## TROUBLESHOOTING



### RECORDING LEVEL

The VOLUME knob has no effect on volume *of the recording*.

- To adjust the level of the **recording volume**, adjust the **REC LEVEL** knob.
- Make sure that the volume display **does not** exceed “**OVER.**”

### ERASING CONTENT

You **cannot erase** tracks from **CD-Rs**. You can only add to unfinalized CD-Rs.

- You **can** erase tracks from **CD-RWs**. If you would like help with this, ask staff for help.