 


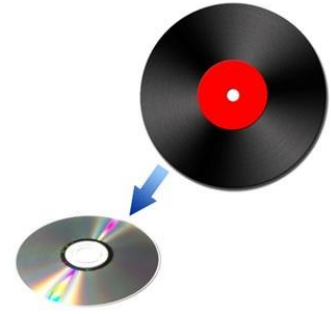

Vinyl to CD



STEP 1

Press the **POWER** button



STEP 2

Press the **PHONO/TAPE/AUX** button to cycle through modes

 
- We want Phono for Vinyl



STEP 3


Load your **CD-R**

- Press the Open/Close Button

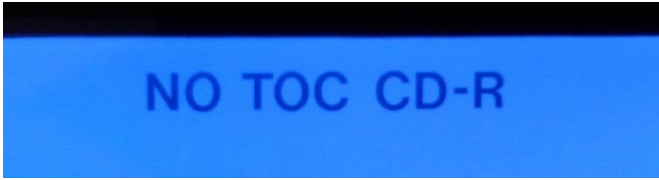


STEP 4

 Make sure **NO TOC** and **CD-R** show up on the display.

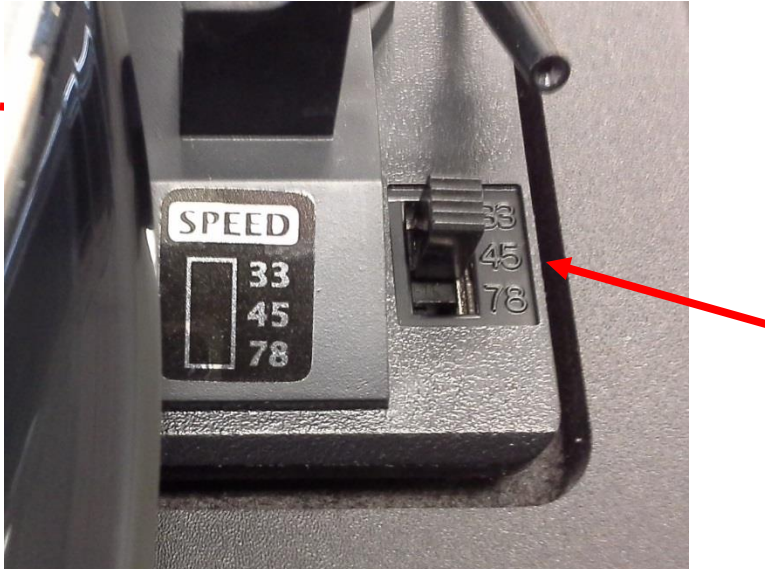

STEP 5

 
Place the Record on the Turntable and Select the **Speed**.

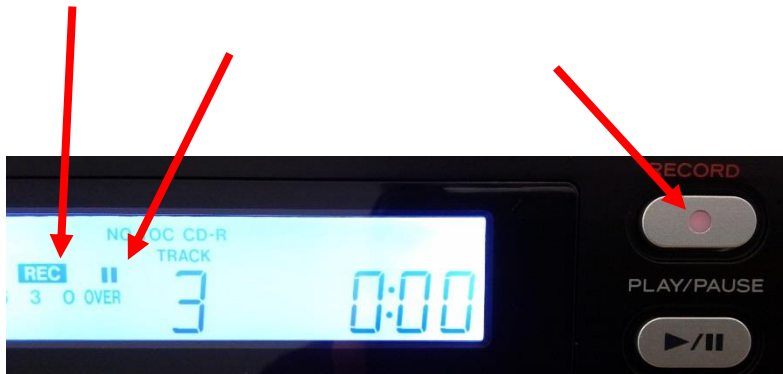

STEP 6

Press the **RECORD** Button

- This starts the record pause mode.
- The red indicator on the **RECORD** button should **blink**.
- On the display, the **REC** indicator should **blink** and the **||** indicator should **light up**.

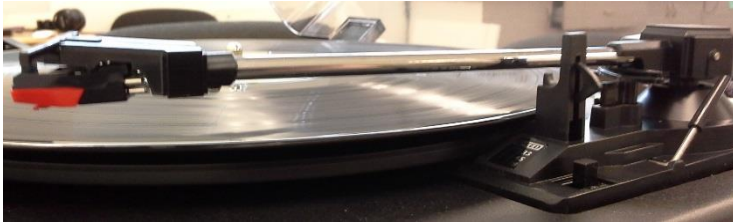 

STEP 7


Gently lower the **Tone Arm** onto the Record.



STEP 8

Press the **Play/Pause** (▶ / ||) button.

 - This *starts the recording process*. It does not start or stop the record.

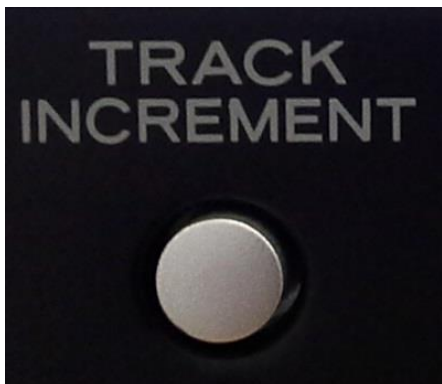

STEP 9

If you would like to have **separate tracks** on the CD, press **TRACK INCREMENT** at the end of each song.



STEP 10

Recording will **automatically stop** at the end of each side.

- You can also stop recording by pressing the **stop** (■) button.



STEP 11

When you are done recording on your CD, you need to finalize it so it can be played on other devices.

- Switch from PHONO to **CD**.
- Press **Finalize** once.
- Then Press **Enter**.

TROUBLESHOOTING



RECORDING LEVEL

The VOLUME knob has no effect on volume *of the recording*.

- To adjust the level of the **recording volume**, adjust the **REC LEVEL** knob.
- Make sure that the volume display **does not** exceed **“OVER.”**

ERASING CONTENT

You **cannot erase** tracks from **CD-Rs**. You can only add to unfinalized CD-Rs.

- You **can** erase tracks from **CD-RWs**. If you would like help with this, ask staff for help.